 


Base Mounted Series VZ5000

How to Order Manifold

Common SUP/Common EXH

40 Type

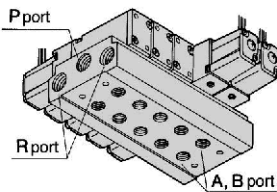

How to Order

E VV5Z5 - 40 - **05** 2 - 01

Ordering source area code

Code	areas
—	Japan, Asia Australia, England
E	Europe
N	North America

Stations

02	2 stations
⋮	⋮
20	20 stations

P, R port thread

—	Rc
F	G
N	NPT
T	NPTF


A, B port size

01	1/8
----	-----



If 10 stations, supply air to P port and exhaust from R port on both sides of the manifold.

41 Type

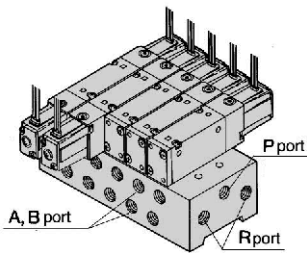

How to Order

E VV5Z5 - 41 - **05** 1 - 01

Ordering source area code

Code	areas
—	Japan, Asia Australia, England
E	Europe
N	North America

Stations

02	2 stations
⋮	⋮
20	20 stations

P, R port thread

—	Rc
F	G
N	NPT
T	NPTF

A, B port size

01	1/8
----	-----




If 8 stations, supply air to P port and exhaust from R port on both sides of the manifold.

Applicable solenoid valve

VZ5□4□-□□□□-Q

Applicable blank plate Ass'y
DXT199-22-1A
Individual EXH spacer Ass'y
DXT199-29-2A
Individual SUP spacer Ass'y
DXT199-35-1A
Applicable interface regulator
ARBZ5000-00-P

42 Type

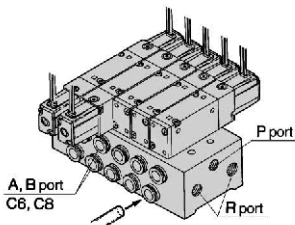

How to Order

E VV5Z5 - 42 - **05** 1 - C6

Ordering source area code

Code	areas
—	Japan, Asia Australia, England
E	Europe
N	North America

Stations

02	2 stations
⋮	⋮
20	20 stations

P, R port thread

—	Rc
F	G
N	NPT
T	NPTF

A, B port size

C6	One-touch fittings for ø6
C8	One-touch fittings for ø8
B7	One-touch fittings for 1/4"
B9	One-touch fittings for 5/16"



If 8 stations, supply air to P port and exhaust from R port on both sides of the manifold.

Protective class
class I (Mark:)

For safety precautions, precautions for products, product specifications, external dimensions, and model selection procedures, see the comprehensive catalog (Best Pneumatics) or the catalog for each individual product.


Base Mounted Series VZ5000

How to Order Manifold

DIN Rail Manifold

Common SUP/Common EXH

45 Type (Non plug-in style)

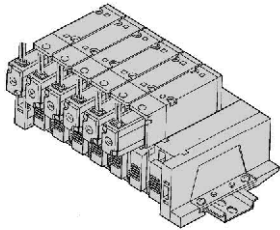

How to Order

E VV5Z5 - 45 - **05** **D** - **C8** C - []

Stations	
02	2 stations
⋮	⋮
20	20 stations

Ordering source area code

Code	areas
-	Japan, Asia Australia, England
E	Europe
N	North America

SUP/EXH block mounting position

Symbol	Position: Applicable Stations
U	U side: 2 to 10 stations
D	D side: 2 to 10 stations
B	Both sides: 2 to 20 stations
M	Special specification

For a special specification, use the manifold specification sheet or the like to provide instructions.

A, B port size

C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
M	Mix

DIN rail length

		Standard
-		
3	For 3 stations	Specify a rail that is longer than the standard length.
⋮	⋮	
20	For 20 stations	

For a mixed specification, use the manifold specification sheet or the like to provide instructions.

Applicable solenoid valve

VZ5□4□-□□□□-Q

Applicable blank plate Ass'y
VZ5000-65-2A

Protective class class I (Mark: ⊕)

For safety precautions, precautions for products, product specifications, external dimensions, and model selection procedures, see the comprehensive catalog (Best Pneumatics) or the catalog for each individual product.